

UNEX
системы видеонаблюдения

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

UXC-1200A







1.	3
2.	3
3.	4
4.	5
5.	,	6
6.	7
6.1.	I –	(1, DVR 1) 7
6.2.	II –	(N, DVR 1)..... 7
6.3.	III –	(N, DVR N)..... 8
7.	DVR UVR 8
8.	PTZ / DVR 9
8.1.	PTZ 10
8.2.	DVR 10
9.	11



1.

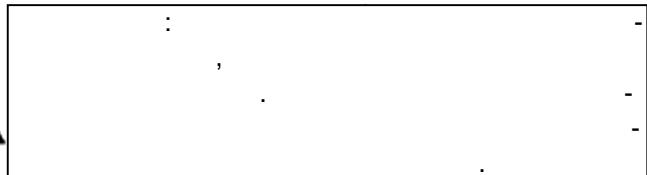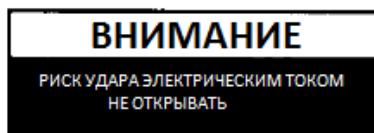

ANSI/NFPA 70.

().

FCC CFR 47

15

B,

A.

2.

- Three black dots arranged vertically, representing a list or a series.

3.

UXC-1200A (UXC)



“Mouse/”

• - USB

- : PTZ –
UXC..
 - : DVR UXC, PTZ -
DVR.

UXC-1200A


DVR WKEY 9.6K ID : 001

UXC-1200A
9600 / , ID 1.


- ID - DVR,

- , . . ID , ID,
DVR, >DEVICES()>CAM/PTZ ID, UXC,

4.

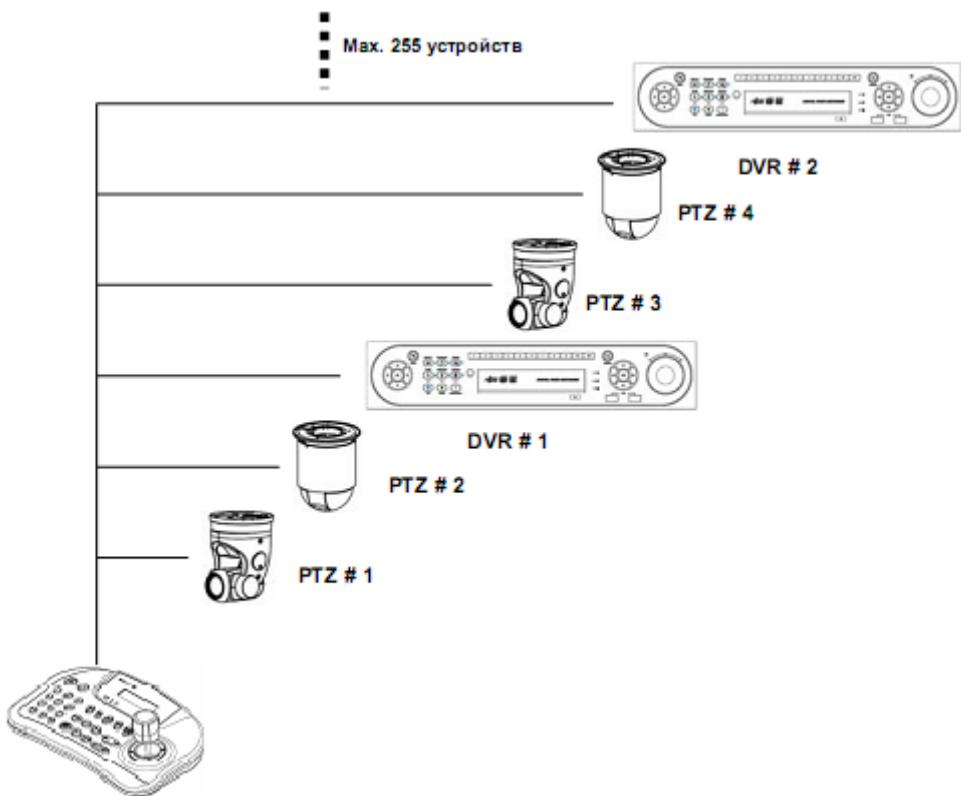


5.

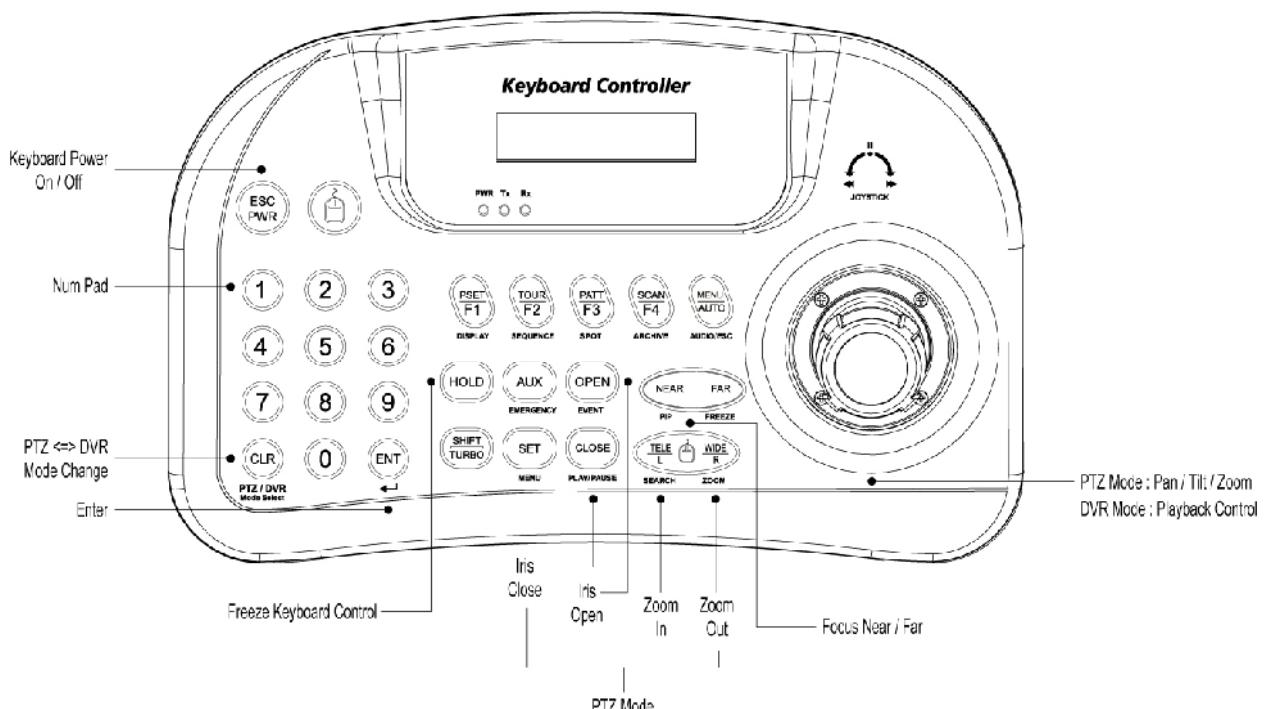


6.

DVR
6.1 I - (1, DVR 1)

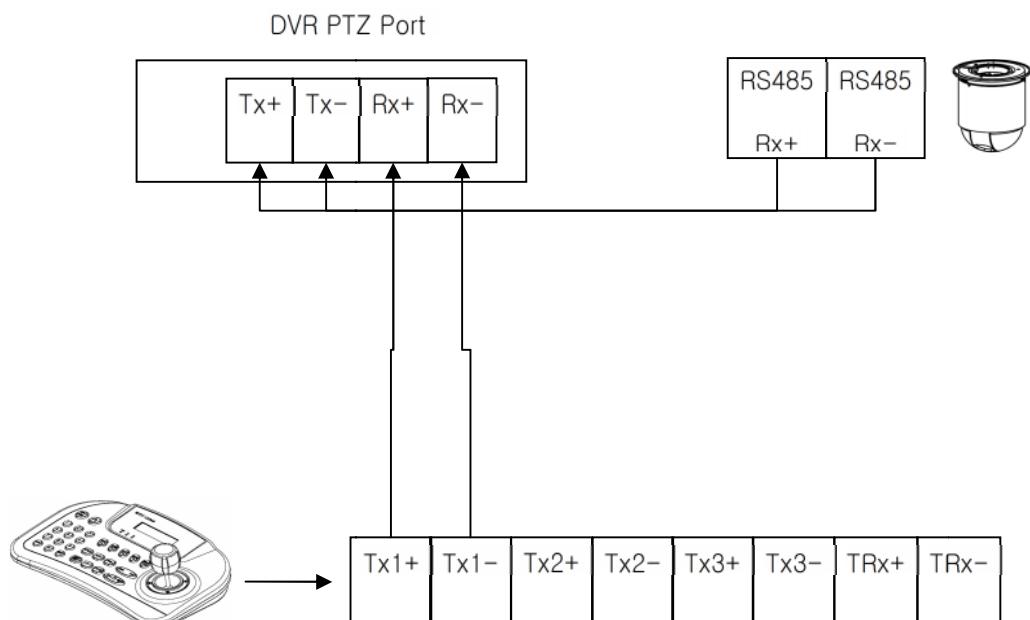


6.2 II - (N, DVR 1)

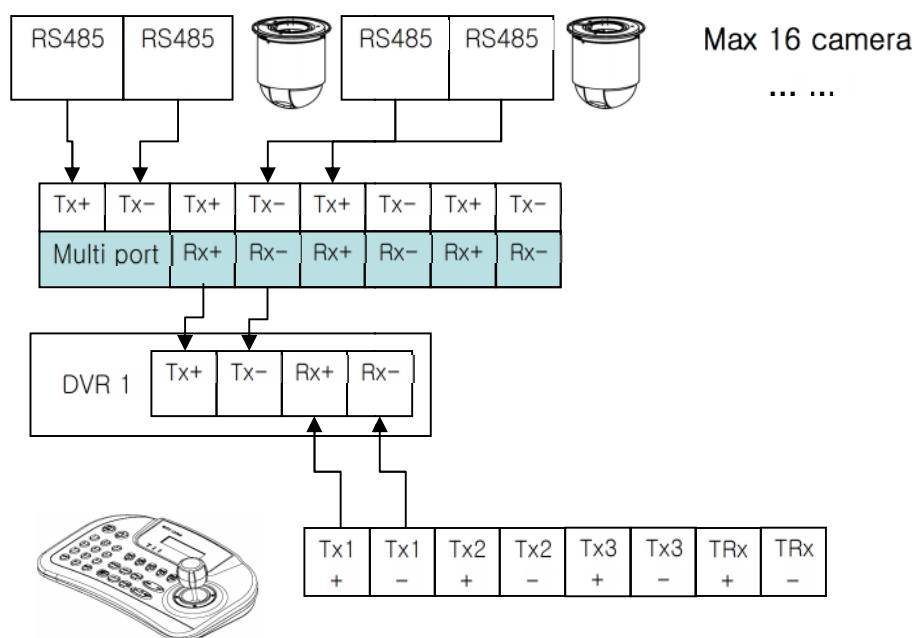

6.3

III -

(N, DVR N)

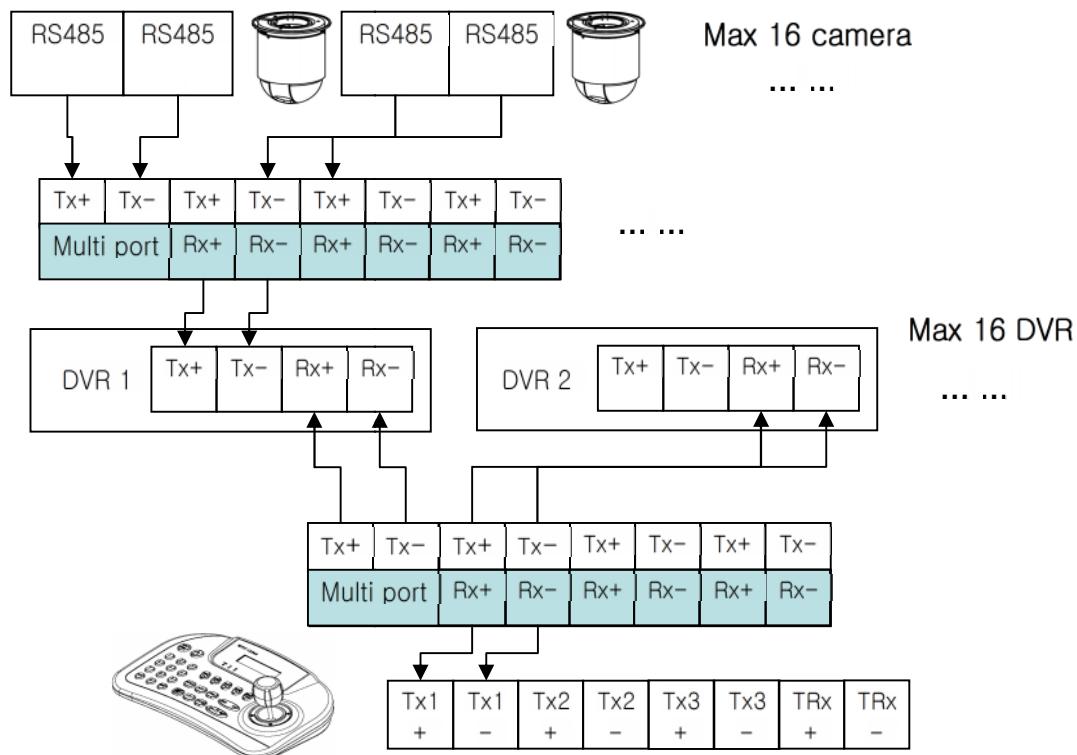

7.

DVR


UVR

DVR: "Setup>SYSTEM>Information: System ID"
ID

2

DVR,

DVR

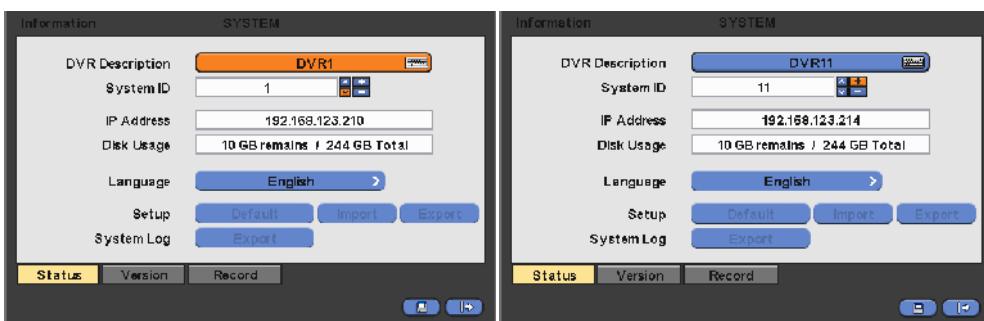

"Setup>Device>Camera/PTZ: Keyboard"

PTZ

ID

CP1200A



8. PTZ / DVR

DVR

RS-485 line.

- DVR: DVR
 - PTZ (): PTZ-

DVR:

1. ID DVR.
(SETUP()>SYSTEM()> INFORMATION(): SYSTEM ID
(ID))
 2. SYSTEM ID UXC-1200A (: ID: 001, 

- | | | |
|----|------------------------|--------------------|
| 1. | ID
DVR. | DVR control mode / |
| 2. | 0
PTZ control mode/ | “CLR”,
PTZ. |

8.1.

PTZ

PTZ.
 + "ENT" () ID ,
 ID ,
 PTZ. ,
 255.
 :
 PSET: - + PSET ()
 - + PSET
 Joystick: / , /
 TELE:
 WIDE:
 DVR

8.2.

DVR

DVR ,
 DVR:
 - **DISPLAY**: : 1>4>9>16>1.
 - **SEQ**: ./ .
 - **SPOT**: ,
 - **ARCHIVE**: ,
 - **AUDIO/ESC**: Setup.
 AUDIO. (.
)
 - **EMERGENCY**: ./ .
 - **EVENT**: .
 - **PIP**: / « - - »
 « - - »,
 + "ENT".
 4 9 ,
 - **FRZ**: -
 - **SETUP**:
 - **PLAY/PAUSE**: /

- **SEARCH:**

- **ZOOM:**

- **JOYSTICK (REW):**

2X, 4X, 8X, 16X, 32X, 62X,

- **JOYSTICK (FF):**

2X, 4X, 8X, 16X, 32X, 62X,

- **JOYSTICK (SETUP):**

- **ENT:**


“ENT” ().

9.

2 UXC-1200A + “SET” (),

change ())

[MAIN SETUP] PASSWORD [****]
[MAIN SETUP] 1. VER : ***
[MAIN SETUP] 2. DATE: 20070519
[MAIN SETUP] 3. TITLE SET ►
[MAIN SETUP] 4. CONTROL ID: 1
[MAIN SETUP] 5. DVR SPD: 9.6k
[MAIN SETUP] 6. COMM: RS485
[MAIN SETUP] 7. SLEEP: OFF
[MAIN SETUP] 8. BUZZER: OFF
[MAIN SETUP] 9. BACKLIGHT: AUTO
[MAIN SETUP] 10. MOUSE SET : HIGH
[MAIN SETUP] 11. PASSWORD: ****
[MAIN SETUP] 12. FACTORY SET ►
[MAIN SETUP] 13. SAVE/EXIT ►

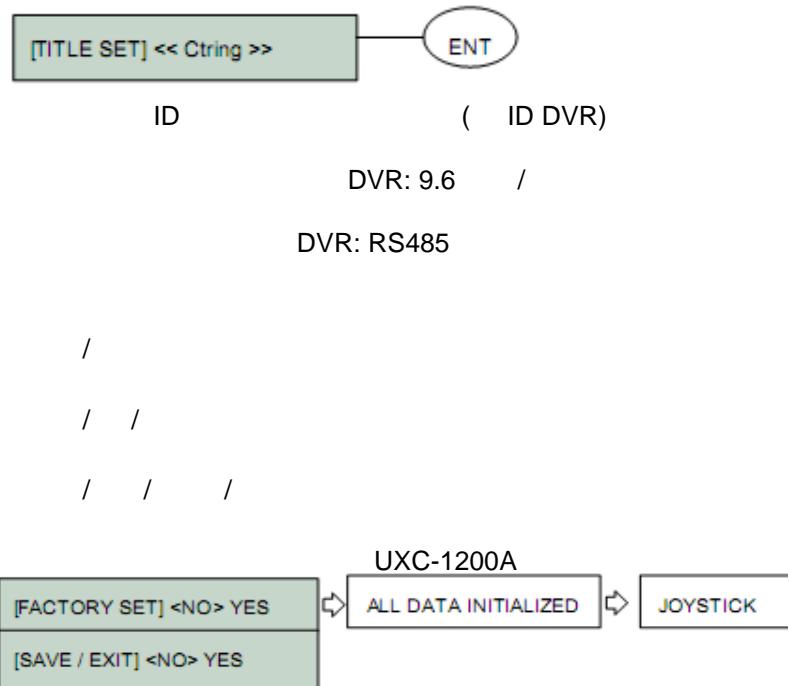

Tx

- Tx ,
 - OFFSET
 - YES FACTORY SET UXC