





РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

PTZ

UMX5135



1.

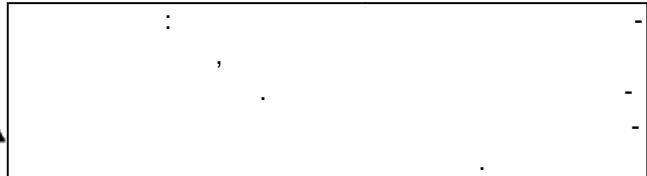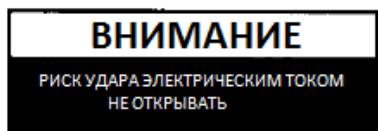


2.

-
-
-
-
-

- , , (),
- , ,
- ,

3.

UMX5135

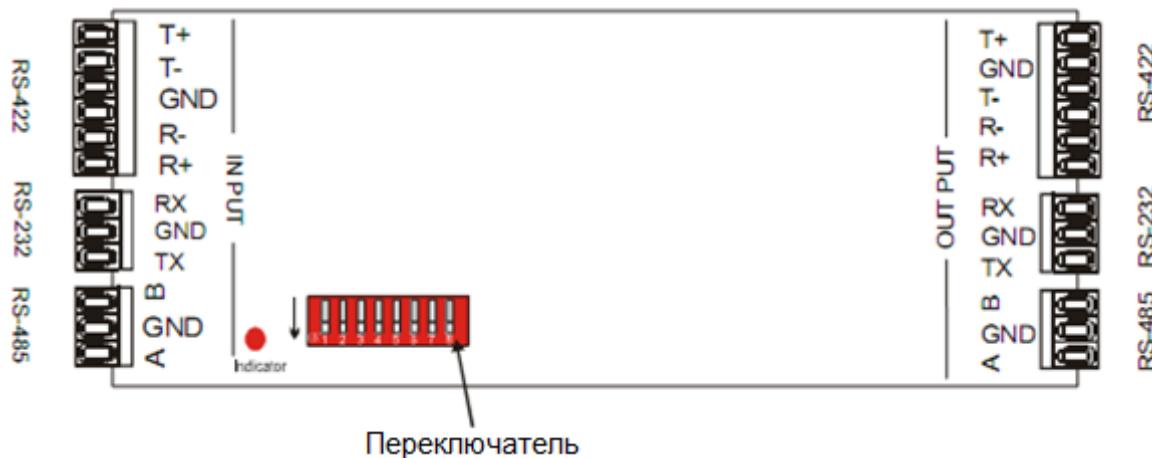

6

1	NATURE 800	100000
2	PELCO_P	000100
3	VICON	000010
4	KALATEL	000001
5	PHILIPS LTC8568	110000
6	PANASONIC	100100
7	DYNACOLOR YK-8651, DM-7216	100001
8	VCLTP	011000
9	PELCO_D	010100
10	SAMSUNG	010010
11	DISCOVER DIS-8000SD	001100
12	IKEGAWA	001010
13	SONNET RECEIVER/DRIVER	001001
14	LILIN P-7625	000011


15	PHLIPS LTC8562	110100
16	CHIPER	110001
17	MIKAMI	101100
18	CBC	101010
19	JT_1641ME	100110
20	SONY EVI-D30/D31	100010
21	SENSORMATIC	101000

: 1- , 0 -


	7-	8-
2400	01	
4800	10	
9600	00	
19200	11	

«INPUT» UMX5135,

4. UMX5135 UMX

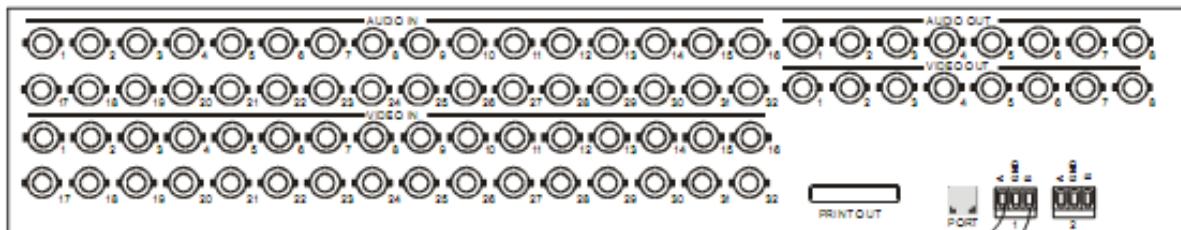

UMX5032-8A Master matrix

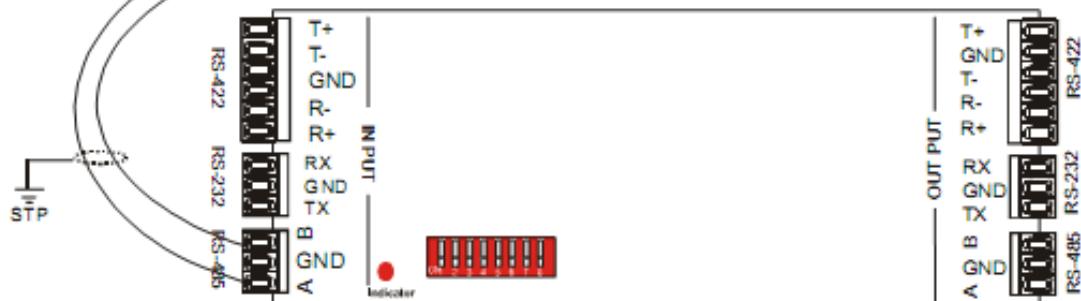

5.

1. « » **ChipER** / «Shot»

1+SHOT+n+TIME+ON (0<n<255)

1+SHOT+ENTER

1+SHOT+0+ENTER

2. IKEGAWA

a) MENU

99+SHOT

PRESET (),

93+SHOT

94+SHOT

95+SHOT

96+SHOT

99+SHOT

97+SHOT

9+SHOT

WIDE/TELE (/)

5+SHOT/6+SHOT

«CTRL»,

5+SHOT,

6+SHOT

b)

: n+SET+ON (0<n<240)

Vicon : «n» 0 59 97 126

: n+SET+OFF

: n+SET+ENTER

c)

: 70+SHOT+n+ON (0<n<4)
UMX5123S

d)

: n+LINE+ON (0<n<9)

e)

, , , ,
WIDE/TELE(/)
: PRESET ().
:
93+SHOT
94+SHOT
95+SHOT
96+SHOT ()
: n+SHOT+ENTER (0<n<5)

SHET,
ENTER , ESC

UMX5123S (UMX5124S UMX5125)

a) MENU

250+PRESET MENU

,
248+PRESET
247+PRESET
246+PRESET
245+PRESET
251+PRESET
252+PRESET
244+PRESET TURBO/CTRL
25+PRESET TURBO/CTRL
N+PRESET (0<n<240)

3.

MIKAMI

72+SHOT+6+TIME+n+ON .(n:0-255)
72+SHOT+2+TIME+n+ON (n:0-8)
72+SHOT+4+TIME+n+ON (n:0-8)
72+SHOT+m+TIME+n+ON (n:0-255; m:20-255)
71+SHOT+1+ON
+OFF
70+SHOT+m+TIME+ON (m:0-255)
+OFF
0+SET+ON
100+SHOT+OFF
99+SHOT
()
95+SHOT
93+SHOT
92+SHOT
98+SHOT
94+SHOT
96+SHOT
8n+SHOT+m+ON (n: 0-9; m: 0-255)
97+SHOT

4.

Samsung

99+SHOT
95+SHOT
93+SHOT
92+SHOT
98+SHOT

94+SHOT

96+SHOT

8n+SHOT+m+ON (n: 0-9; m: 0-255)

100+SHOT+OFF

70+SHOT

70+SHOT+0+ENTER

73+SHOT+n+ON (n: 1-3)

74+SHOT+n+ON (n: 1-3)

5.

Lilin

F1+ON SPRAY

99+SHOT

(

)

95+SHOT

93+SHOT

92+SHOT

98+SHOT

94+SHOT

96+SHOT

97+SHOT

: 73+SHOT+M+TIME+N+ON

(1)

(2)

,