

UNEX

системы видеонаблюдения

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

UIP 5800D



1.	3
2.	3
2.1	3
2.2	4
2.3	4
2.4	5
3	6
3.1	6
3.2	7
3.3	8
3.3.1	8
3.3.2	9
3.4	9
4	12
4.1	12
4.2	14
4.3	ACTIVE	14
1	16
2	16

1.

2.

2.1

IP

IP-

IP-

CCTV

IP-

704.576.IP.

- 1. 1
- 3. 1
- 4. CD 1

UIP-5801D - 1 D1
UIP-5802D - 2 D1
UIP-5804D - 4 D1

2.2

- - Internet
- Hisilicon Hi3512 Linux,
- H.264 G.726
- SD (32)
- PAL/NTSC
- D1, Half-D1, CIF QCIF
- 32
- / 16 / (-)
- LAN,WAN IEEE802.11a/b/g/n (-)
- RS-485
- :
- 4 ,
- :
- , : HTTP, TCP/IP, UDP, SMTP, DDNS, DNS, SNTP, BOOTP, DHCP, FTP, SNMP, RTP, UPNP
- , -

2.3

	1/2/4 , PAL NTSC;BNC (1.0Vp-p,75)
	H.264 Main Profile@Level 3.0, MJPEG
	PAL: 176*144(QCIF), 352*288(CIF), 704x288(2CIF), 704*576(D1) NTSC: 176*128(QCIF),352*240(CIF),704x288(2CIF), 704*480(D1)
	, , , , ,
	PAL: 1-25 /
	32Kbps~16Mbps
	<200 (LAN)
	1/2/4 , RCA ; , :4.7 O



	1
	G.726
	1
	10 Base-T/100 Base-TX Ethernet (RJ-45)
	1 RS485
	SD, SD2.0 (32)
	4, NO () NC()
	4, 120 AC 1A/24 DC 1A
	e-mail, -
	-10 ~ +55
	10 ~ 85%
	DC 12 ,1A
-	15
-	TCP, UDP, IP, HTTP, FTP, SMTP, DHCP, DNS, ARP, ICMP, POP3, NTP, IPsec, UPNP, RTP, RTCP
	205 150 50

2.4

- : Pentium 2.8
- : 512
- : Nvidia Geforce FX5200 ATI RADEON 7000(9000)
256M <
 >
- :
- : , 40 G


Microsoft Windows /2000/XP/2003/Vista/Windows 7 (32-)

- IE 7.0
- DirectX9.0

- TCP/IP
- . : Nvidia Tnt/Tnt2, Geforce Mx200/400/420/440, Fx5200/5600 ; ATIR adeon7000/7200/ 7500/8500/9000/9200/9500/9600 , MatroxG450/550; INTEL 845G/865G

3


3.1

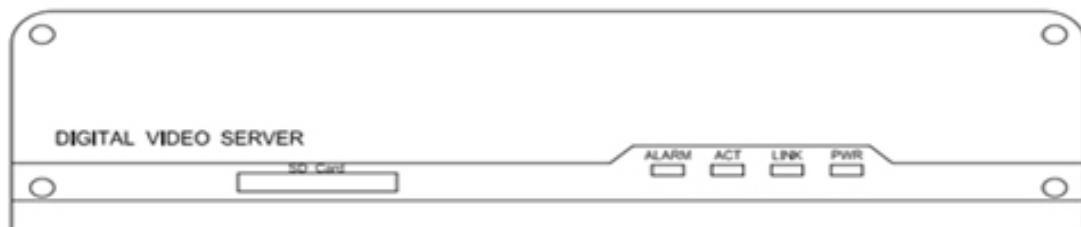


PWR ()			DVS
			DVS
LINK ()			
ACT ()			
ALARM ()			

3.2


1- UIP-5801D:

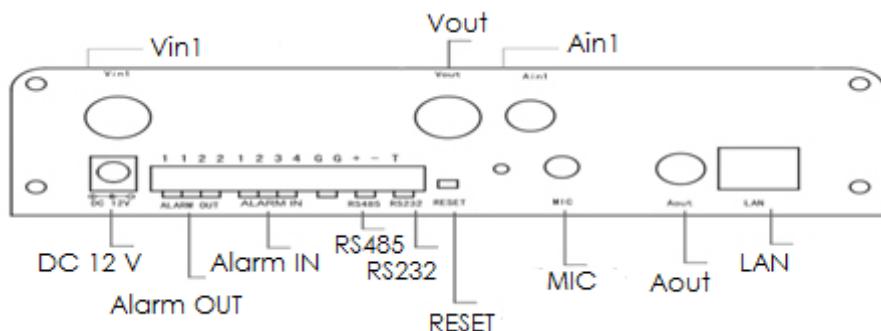

2- UIP-5802D:

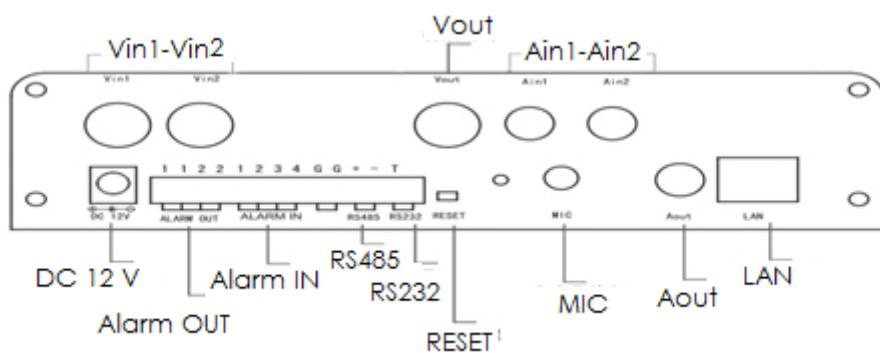

4- UIP-5804D

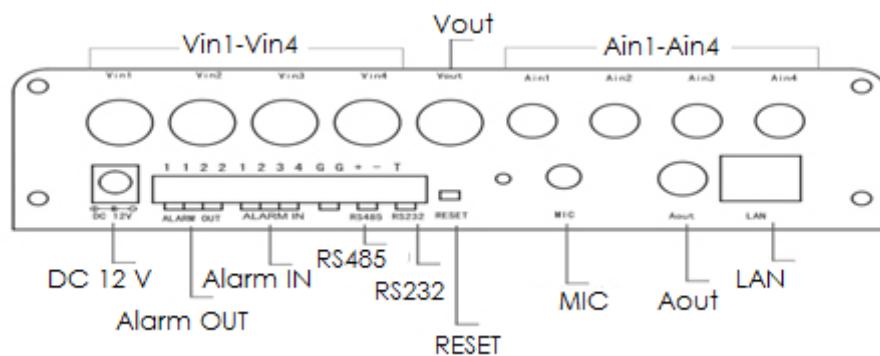

DC 12 V:

LAN: Ethernet

Vin1—Vin4: 1 ~ 4


Ain1—Ain4 : 1 ~ 4

ANT: , , ()

MIC:

Aout:

RESET:

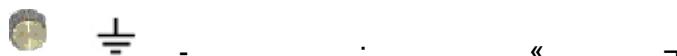

ALARM OUT: 4
 «1 – 1», «2 – 2», «3 – 3», «4 – 4»

ALARM IN: 4
 «1», «2», «3», «4» «G» () -
 (),
 («NO») («NC»).


RS485 RS232 :

G	+	-	T	R
	RS485 +	RS485 -	RS232	RS232


3.3

3.3.1

1.

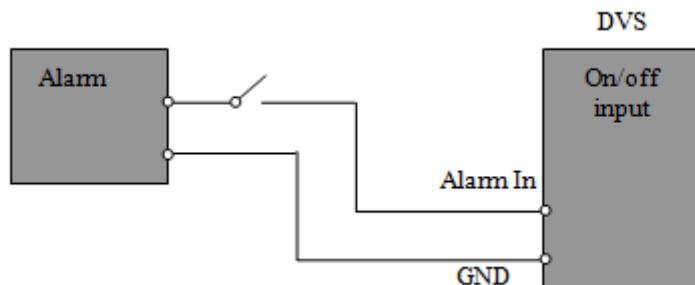


2.

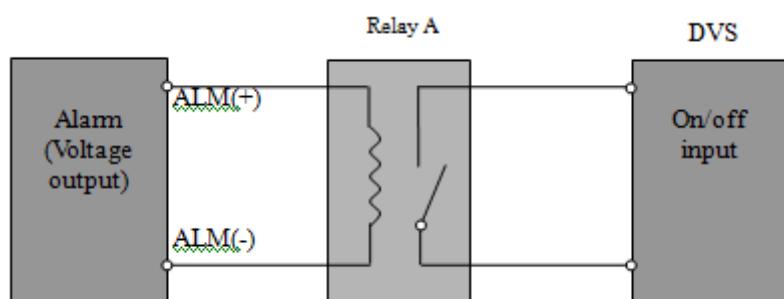


• A
DVS (120VAC/1A 24VDC/1A).

3.3.2

1.

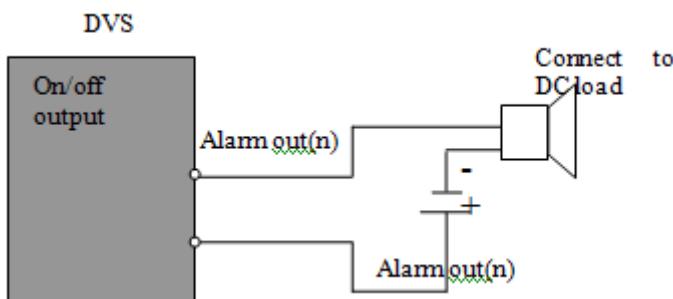

2.

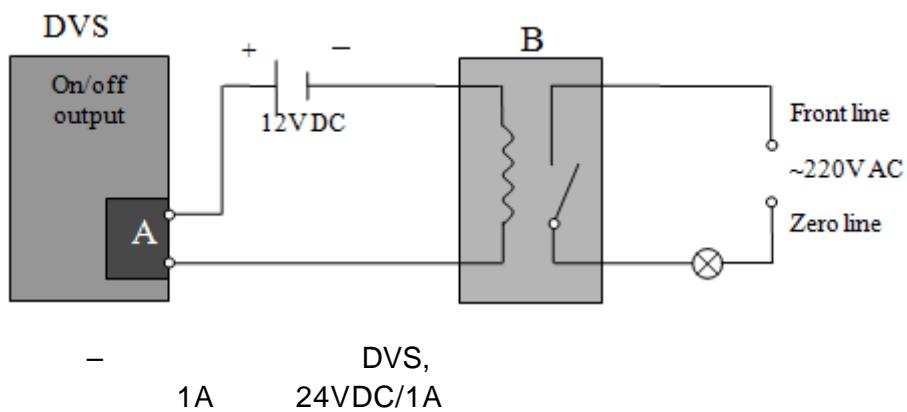

3.4

3.4.1

1:

2:

1

3-

4-

5.

•

BNC

IP

(DC 12V)

1

+12 !

1

3,4,2

19

255.255.255.0!
Windows 7

$$[1] = [1] \quad \quad \quad [1] = [1] \quad \quad \quad [1].$$

A screenshot of a Windows 7 desktop. The taskbar at the bottom features several pinned icons, including the Start button, File Explorer, Task View, and a search icon. A blurred background image of a city skyline is visible.

Панель управления ▶ Помощь и поддержка ▶ Поиск в пан...



Настройка параметров компьютера Пресмотр: [Категория](#)

-  Проверка состояния компьютера
-  Архивирование данных компьютера
-  Поиск и исправление проблем
-  Изменение типа учетной записи
-  Оформление и

 Настройка разрешения экрана	 Часы, язык и регион
 Оборудование и звук	 Смена раскладки клавиатуры или


-  Просмотр устройств и принтеров
-  Установка расписания для выполнения задач и других способов ввода
-  Добавление устройства
-  Изменение языка интерфейса

【 】

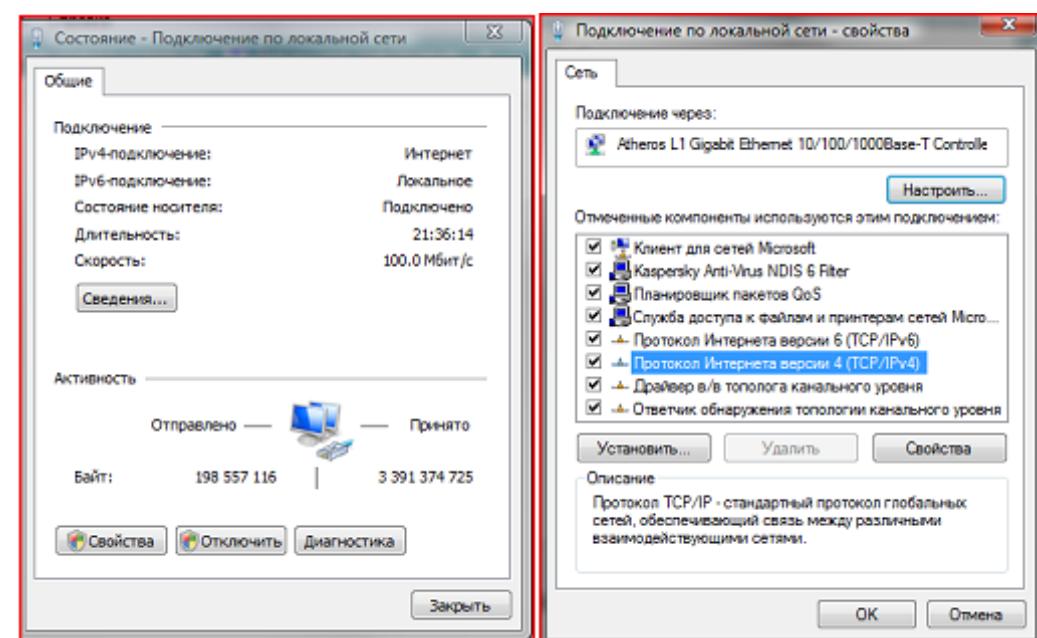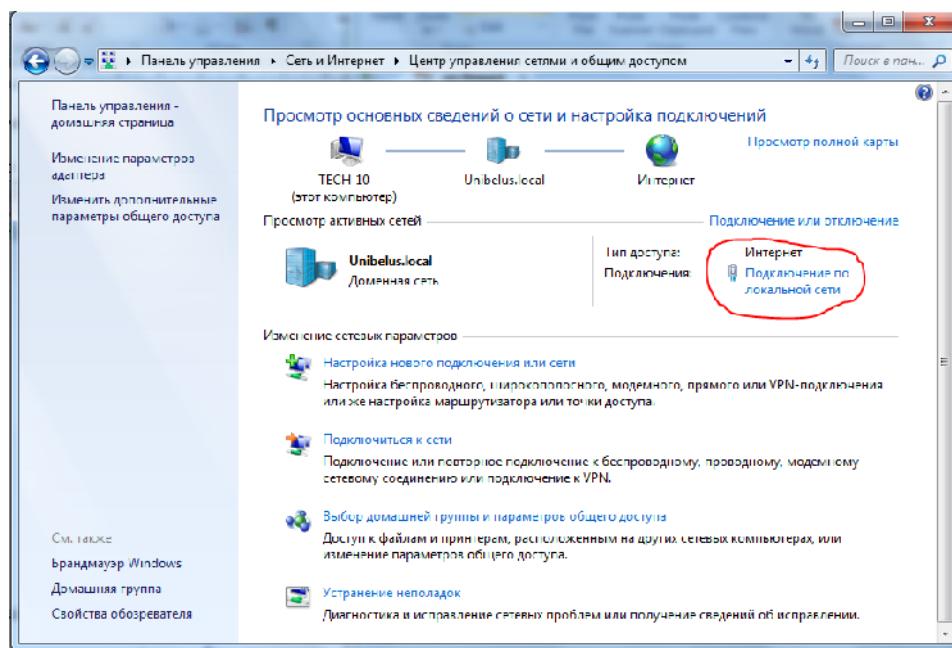

(TCP/IPv4)

4

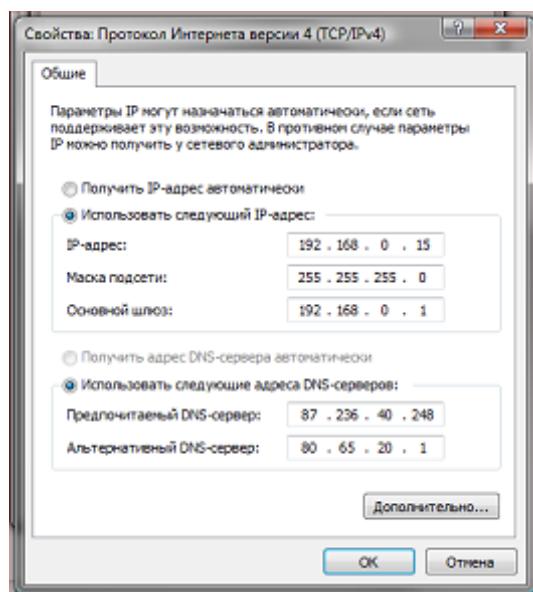

IP-
(, IP 192.168.55.66, IP-
255.255.255.0).

« ».
:
Internet Explorer 7.0 !
()
, , DVS

4

4.1

SearchNVS (IP ,
).
➤ A: Search NVS **【tool software】** CD


➤ B: SearchNVS, -

【Start】 --- 【all programs】 --- 【NVS Center500】 --- 【Search NVS】

- : IP: 192.168.55.160;
- 255.255.255.0. : admin; : admin
- SearchNVS

1. SearchNVS **【Search】**,

SearchNVS

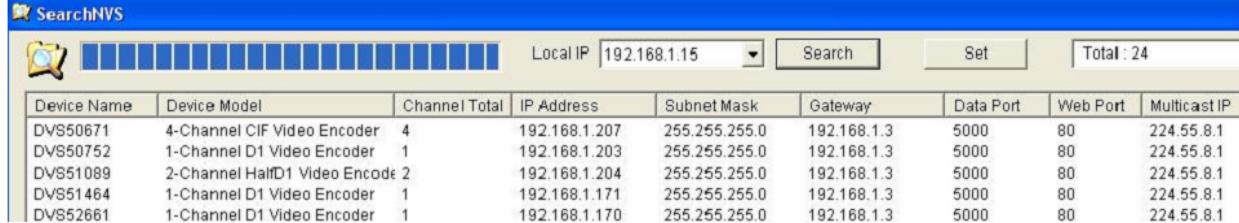


Device Name	Device Model	Channel Total	IP Address	Subnet Mask	Gateway	Data Port	Web Port	Multicast IP
DVS50671	4-Channel CIF Video Encoder	4	192.168.1.207	255.255.255.0	192.168.1.3	5000	80	224.55.8.1
DVS50752	1-Channel D1 Video Encoder	1	192.168.1.203	255.255.255.0	192.168.1.3	5000	80	224.55.8.1
DVS51089	2-Channel HalfD1 Video Encoder	2	192.168.1.204	255.255.255.0	192.168.1.3	5000	80	224.55.8.1
DVS51464	1-Channel D1 Video Encoder	1	192.168.1.171	255.255.255.0	192.168.1.3	5000	80	224.55.8.1
DVS52661	1-Channel D1 Video Encoder	1	192.168.1.170	255.255.255.0	192.168.1.3	5000	80	224.55.8.1

【Connect NVS Local IP】 IP

NVS.


2. IP

IP IP IP IP
 “command” “cmd” (Windows 2000/XP), “start”, “run”,
 “Enter”, “confirm”, “ipconfig”

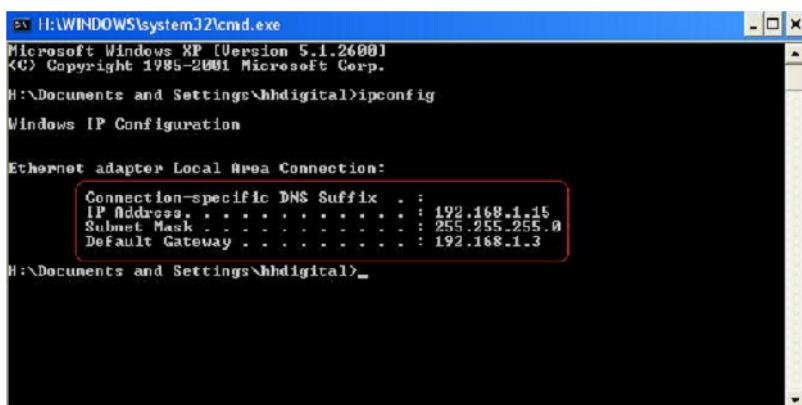

IP , , , :192.168.1.100.


【Set Parameters】 (), :

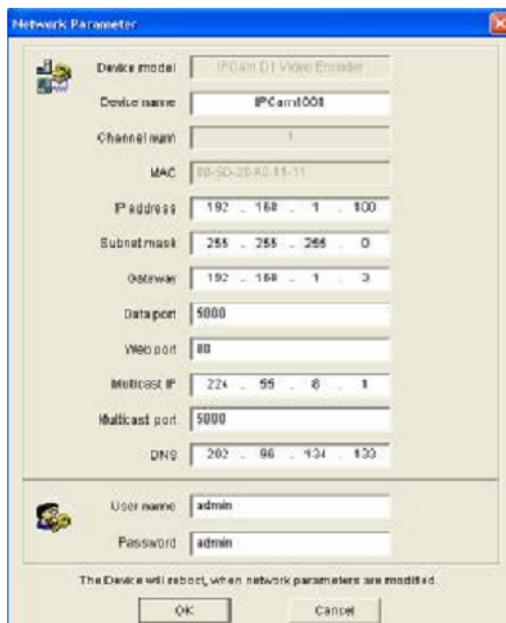

; “OK”, IP

4.2

: “Start”>“Run”>“command”,
192.168.55.17. “Enter”.

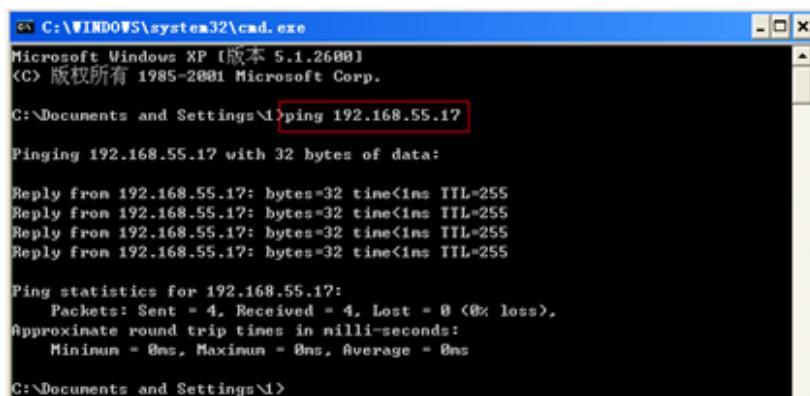

```
cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.

C:\Documents and Settings\>ping 192.168.55.17

Pinging 192.168.55.17 with 32 bytes of data:
Reply from 192.168.55.17: bytes=32 time<1ms TTL=255

Ping statistics for 192.168.55.17:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Documents and Settings\>
```

IP SearchNVS (IP
, .).

4.3 ActiveX

IE
ActiveX.
ActiveX: Internet Explore: IP IP
Internet Explore;



【File】 ,

ActiveX:



System Login

Notice

ActiveX

For initial access or issues with viewing the camera image, please click the link below to download the ActiveX setup file. Once the file is decompressed and installed, please login to the camera again.

After installing the OCX successfully, please delete cookies in computer when user logs error. IE tool-->Internet option-->browser history (delete temporary file, history, COOKIE...) or confirm the username and password.

Download OCX Setup File [File](#)

ActiveX,

【Run】

【Save】

Ac-

"xdview.exe"



Internet Explorer, “Install” (“Install OK!” ().


ActiveX

Internet Explorer, IP

192.168.55.17,

System Login

Notice

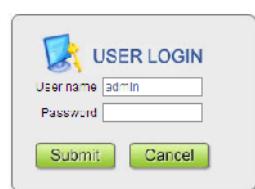

USER LOGIN

For initial access or issues with viewing the camera image, please click the link below to download the ActiveX setup file. Once the file is decompressed and installed, please login to the camera again.

After installing the OCX successfully, please delete cookies in computer when user logs error. If browser-->internet option-->browser history (delete temporary file, history, COOKIE...) or confirm the username and password.

Download OCX Setup File [File](#)


admin),

“login” ().

: admin),

(

:

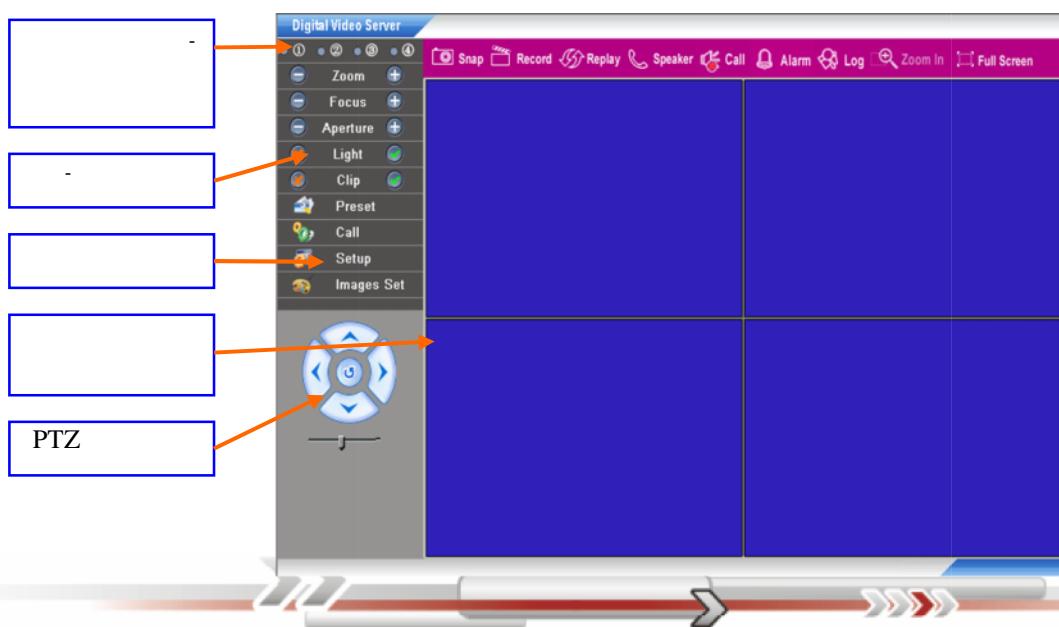

ActiveX

«

ActiveX»

1

IP : 192.168.55.160 : 5000
 : 255.255.255.0 Web : 80
 : 192.168.55.1 DHCP: OFF

IP : 192.168.1.160 : 255.255.255.0
 : 192.168.1.1 / :

2

1.

: **【RESET】** IP
 : ().
 : **【RESET】**,

2.

,
 V4.0.0.0 ()?
 : 2 IP
 : (). IP
 : IP , **V6.0.0.1.**

3. IE

: ActiveX.
 : IP ActiveX Control.

ActiveX Control IP
【Run】 **【Save】** ActiveX.
 "xdview.exe" ActiveX.
 "Install OK!" ()

4.

IE

“delete file” (), “delete all offline contents” ().

5.

1:

2:

3:

4:

6.

IE

1:

2: IP

3: IP

4: IP,
5: web

6:

(IP

: 192.168.55.160; : 255.255.255.0).

7.

()

C:\Winnt\system32\Config.exe);

config.exe,

ActiveX (

EMS;

IE

8.

1:

2:

3:

9. NVS

: NVS

:


10.

1: , DirectX ;

2: , (

)

: DirectX, "DXDIAG":

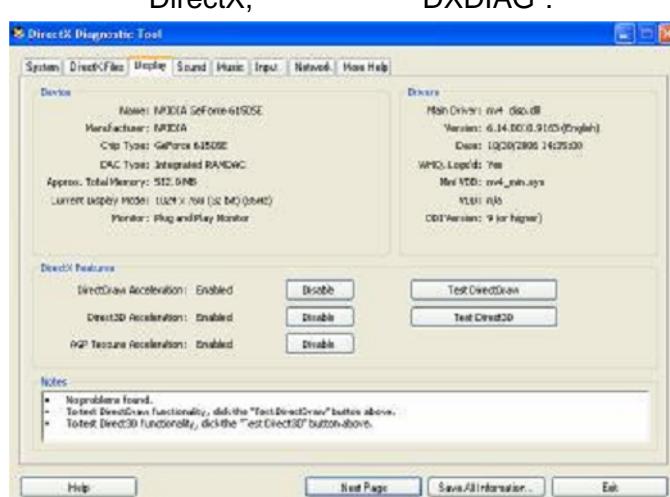

:
rectX.

DirectDraw, Direct3D,

AGP
DirectX

Di-

